



# SPECIALTY TOP CO.

## INSTALLATION INSTRUCTIONS TOYOTA FJ40 OEM REPLACEMENT TOP PART #222-060

Thank you for purchasing Specialty's Convertible Top for your Toyota vehicle. It has been designed for great fit and long wear. Please read and follow, precisely, all installation instructions provided when installing top. Failure to do so may result in a poor fitting top and could place occupants in a potentially hazardous situation.

### TOOLS REQUIRED:

3/16" DRILL BIT	FLAT BLADE SCREWDRIVER
1/8" DRILL BIT	#2 PHILLIPS SCREWDRIVER
ELECTRIC DRILL	ICE PICK OR SMALL NAIL
8' TAPE MEASURE	

### INSTALLATION TIPS

*Before you begin installing this top, here are a few tips to make installation easier.*

*This top should be installed where the temperature is above 72 degrees Fahrenheit. Below this temperature, the top may contract making it difficult to install.*

*It is normal for a top to contract and wrinkle when stored in the shipping carton. The top will relax and wrinkles will disappear within a few days of installation as fabric adjusts to shape of mounting hardware.*

### INSTALLATION PROCEDURES:

Refer to page 3 to assure that all parts are included in your kit.

### INSTALLATION OF TOP:

#### Step 1.

Remove old top leaving bows, turn fasteners, etc., in place. Check bows to see if they are square on vehicle, measuring across from corner of bow to body on opposite side. Bend if necessary, to make cross measurement the same on both sides.

#### Step 2.

First, slip Rope loop on front of top into channel on windshield. Second, put top partially back over bows, leaving top loose at the bottom edges; just sitting in place. Next, start loop in top, over doors, into channel at front, then start aluminum rod into loop, working loop into channel, and rod into the loop, working from front to back. (See Photo). Note: right angle bend in rod should go all the way to the inside of the windshield when fully installed. Next, unzip the zipper behind the doors, and insert rope loop into the channel behind the doors. (See Photo).

#### Step 3.

Fasten top all the way around, straps to footman loops and turn fastners through eyelets in top. Mark and drill 3/16" Hole and install second turn fastner on each side, opposite the extra eyelets.

#### Step 4.

Mark and drill 1/8" Hole and intall snap stud on each side of front windshield.

### COVERING DOORS:

#### Step 1.

Remove door frame, remove window frame, remove handles, and remove hinges. Pull weather strip-ping out of channel on front, back and bottom. Romove screws that fasten channeling to door. Unclip cloth bar from inside door and remove old cloth. Also take cloth bar out of old cloth.

#### Step 2.

On replacement, First intall cloth bar on new material and install on door. Pull cloth over door starting at the bottom center of the door. Pull cloth around frame firmly, punch cloth with small nail or ice pick, and install screws into channel. Work each way from center, at


**Step 2 (Cont):**

*bottom installing screws and channel, pulling cloth at each place for a smooth fit. Proceed up the sides of the door repeating the same process.*

*Next reinstall the rubber weather strip. The rubber weather stripping can be installed by first applying silicone spray, or a similar lubricant on the rubber and on the channel. Then insert one side into the channel, and work the rubber weather strip into the channel with a screw driver.*

**Step 3:**

*Replace window frame, handles, and hinges and door frame.*

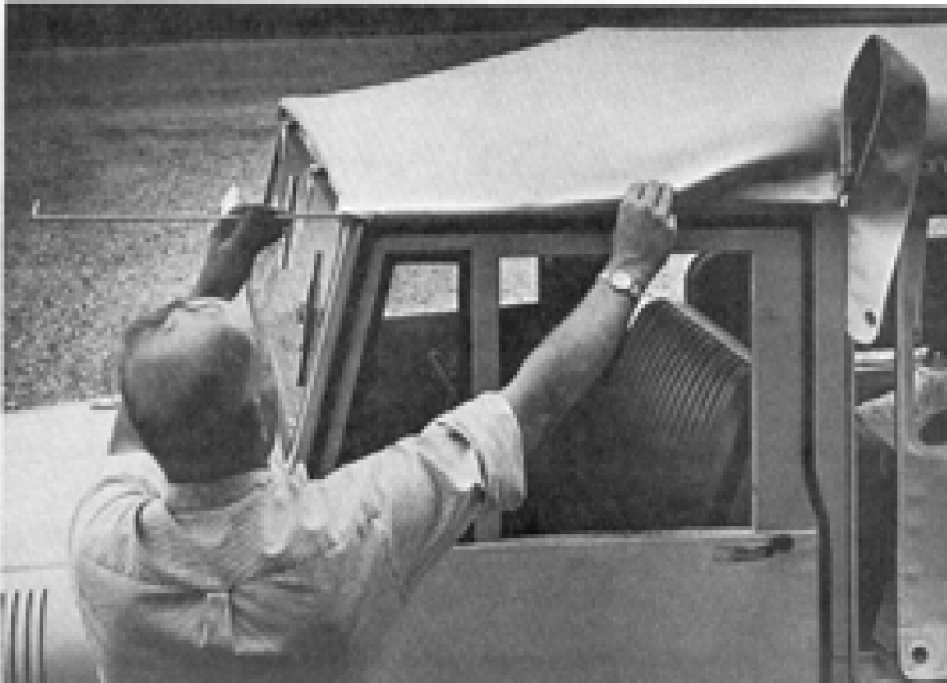

# PARTS IDENTIFICATION

Item 1  
#10-32 Hex Nut  
10 Required



Item 2  
#10-24 Hex Nut  
4 Required



Item 3  
#8 x 1/2" Oval Head  
Sheet Metal Screw  
4 Required



Item 4  
Turn Footing  
10-32 X 3/8  
10 Required




Item 5  
Sheet Metal Screw Stud  
3 Required




Item 6  
#10-24 x 1/2"  
Slotted Flat Machine Screw  
4 Required



Item 7  
Footman Loop 1 1/4"  
2 Required



Item 8  
Aluminum Rod  
2 Required

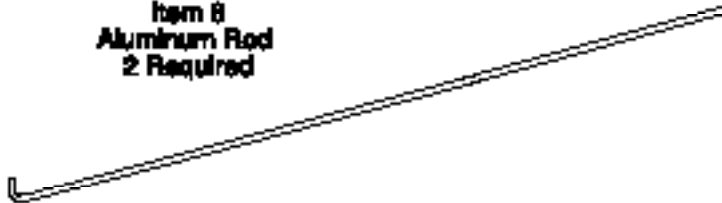

Item 9  
Door Fabric  
2 Required



## **CARE INSTRUCTIONS**

Convertible tops and accessories require special care if you want to get the maximum usage and enjoyment from them. The following recommendations, if followed carefully, can extend the life of your top or accessory.

1. Hand wash using a mild non-detergent soap such as Ivory. Use a nonabrasive cloth or sponge. Rinse thoroughly.
2. **DO NOT** wash in direct sunlight and avoid automatic car washes.
3. When your top is clean, we recommend using "303 Protectant" on both the vinyl top and windows. This product contains a sunscreen that helps protect from the sun's damaging rays. Stay away from products containing alcohol as it will cause the fabric and windows to lose their elasticity, thus reducing the life of your top or accessory. If you are unable to locate "303 Protectant", please call 1-800-223-4303 for a distributor near you.
4. Direct sunlight and heat are the biggest enemies of the windows. Park in the shade whenever possible. If you must park in the sunlight, rotate the direction that you park every few days so all windows get even exposure.
5. Our tops are designed so that you may roll up and/or store the rear curtain and side curtains. To prevent scratching of the windows, be sure that windows are completely clean and free of dust particles. Even a little dirt will badly scratch the windows. You may want to use a soft cloth when rolling up or storing your windows. Heat may build up on rolled up windows, so be sure to unroll them frequently. If you roll up the windows at the beginning of summer and leave them, they may be ruined by fall.
6. **DO NOT** open or roll up windows at temperatures below 45 degrees F. This could cause them to crack or break.
7. **NEVER** use ice scrapers or snow brushes on vinyl windows.

## **WARRANTY INFORMATION:**

Specialty Top Co. warrants to the original purchaser of any product it manufactures, that the product will be free of defects in material or workmanship for a period of 90 days from date of purchase. Such obligations under this warranty shall be limited to the **repair or replacement**, at Specialty's discretion, of any assembly or parts which upon examination by Specialty Top Co. proves to be defective. All defective items must be returned with proof of purchase to Specialty Top Co., 200 East 64th Avenue, Denver, Colorado 80221, freight prepaid. This warranty does not cover damage resulting from abuse, misuse, alteration, accident or damage in transit. Specialty's obligations under this warranty are limited to the aforementioned repair or replacement of warranty defects for which the return authorization has been received during the warranty period, and **SPECIALTY TOP CO. SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM BREACH OF THIS OR ANY IMPLIED WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

If you need assistance or further information, you may contact Specialty Top Co. at 1-866-487-9944 between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Mountain Standard Time.